


SPA2

Quick Installation Guide



SPA2

Port Definition

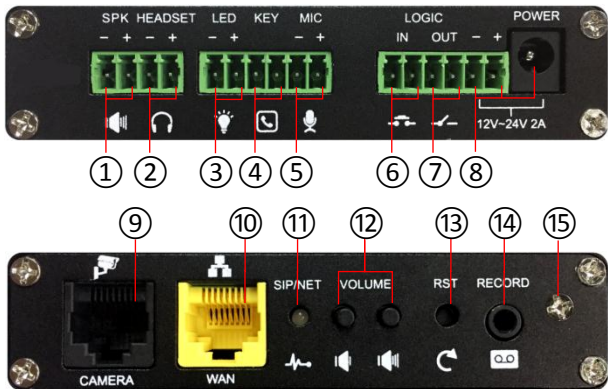

- ① **Speaker interface:** according to the device input voltage adaptive output maximum power; 4Ω speaker, POE / 8W, 12V / 10W, 18V / 20W, 24V / 30W. The greater the horn impedance, the smaller the output power.
Suggested wire diameter: 18AWG or larger diameter.
- ② **Headset interface:** speaker audio signal output, for external headset or active speakers.
- ③ **LED interface:** 5V output, can be an external LED, indicating the network status, call status, registration status.
- ④ **Function key interface:** connection switch, you can log on page set the call number or IP address.
- ⑤ **Microphone interface:** the proposed use of electret condenser microphone, sensitivity: -38dB, bias voltage 2.2V. Microphone signal cable it is recommended to use a shielded cable and connect the shield cable to the grounding screw, improve anti-interference.
- ⑥ **Switch input interface:** the connection switch, you need to log on to the relevant settings page.
- ⑦ **Switch output interface:** Corresponding to the short-circuit input interface, login device security page settings, you can control the alarm light, electric locks and other equipment; with the adjacent ⑧ power port connection for external equipment power supply.
- ⑧ **Power input interface:** 12V ~ 24V 2A input, according to the input voltage to determine the maximum output power amplifier.
- ⑨ **Camera interface:** standard RJ45 interface, connect the original camera, the proposed use of five or five sub-network cable
- ⑩ **Ethernet interface:** WAN port, standard RJ45 interface, 10 / 100M adaptive, support POE input, it is recommended to use five or Super five network cable.
- ⑪ **Registration/Network LED:** indicates network status, call status, registration status.
Fast flashing: network anomaly or SIP account exception. Slow flashing: during a call. Always bright: successful registration.
- ⑫ **Volume control key:** standby to adjust the volume of the ringtone, call only adjust the call volume, broadcast only adjust the broadcast volume. Long press the volume down key to broadcast the IP address. Long press the volume plus key to switch the IP address acquisition mode (Specific operation see below **search door phone**).
- ⑬ **Restore factory key:** press and hold for 3 seconds to flash the device to restart and restore the factory settings.
- ⑭ **Recording output interface:** the local microphone voice and call voice mixed output, suitable for computer and other equipment recording.
- ⑮ **Grounding screw:** external parts Metal housing needs to be connected to this interface to prevent static electricity and other interference caused the equipment to work abnormally.

1. Installation

The first step: the equipment with metal strips (user-owned) fixed in the installation location.

The second step: the microphone, Function Key button, speakers and other metal shell with

thick wires connected to the device ⑮ grounding screw. And then connect the line of the terminal in turn

inserted into the corresponding interface.


The third step: plug the network cable and power, the device light flashes on behalf of the power connection is normal.

2. Searching Door Phone

There are three methods as shown below to search the door phone.

Method 1:

Open the iDoorPhone Network Scanner. Press the Refresh button to search the door phone and find the IP address. (Download address www.Voptech.com)

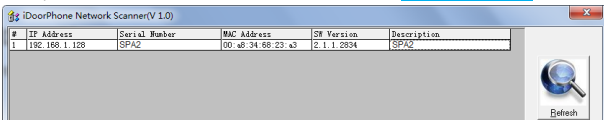

Method 2:

Connect the speaker, by pressing the volume down key for 3 seconds (after 30 seconds after power on), the device automatically voice broadcast the machine's IP address.

Method 3:

Long press the volume plus key for 10 seconds, the speaker issued a rapid beep, and then quickly press the three volume plus the key, beep stopped. Wait 10 seconds, successfully switch to dynamic IP after the system automatically voice broadcast IP address. Switching again will become a fixed IP address.

Default Setting			
Default DHCP Client	Disable	Static IP Address	192.168.1.128
Voice broadcast	Hold the volume down	Default Web	80

IP address	key for 3 seconds	Port	
------------	-------------------	------	--

3. SIP door phone setting

Step 1: Log in to the device page

Use the web browser input IP (for example: http://192.168.1.128) access, the default user admin, password admin.

A screenshot of a login form with a red header. It contains the following elements:

- User:** A text input field.
- Password:** A text input field.
- Language:** A dropdown menu currently showing "English".
- Logon:** A button to submit the login information.

Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters.

Select "Activate", and then click **[Apply]** to save this setting.

A screenshot of a web interface for SIP settings. The left sidebar shows a navigation menu with categories: System, Network, Line (selected), Intercom settings, Security settings, and Function Key. The main content area is titled "SIP Basic Settings" and includes:

- Line:** A dropdown menu set to "SIP 1".
- Basic Settings >>**
 - Line Status: Registered
 - Phone number: 5526
 - Display name: 5526
 - Authentication Name: 5526
 - Authentication Password: *****
 - Activate:
- Proxy Server Settings:
 - SIP Proxy Server Address: 172.18.1.88
 - SIP Proxy Server Port: 5060
 - Backup Proxy Server Address: [empty]
 - Backup Proxy Server Port: 5060
 - Outbound proxy address: [empty]
 - Outbound proxy port: [empty]
 - Realm: [empty]
- Codescs Settings >>**
- Advanced Settings >>**
- Apply** button

Step 3: Set the volume (if not connected can skip)

Set the device volume size, as shown below, click **[Apply]**.

Hands-free volume setting: normal call speaker volume size.

Broadcast output volume: server music broadcast speaker volume size.

Signal volume: call ringing, power back to ling, correct tone, error tone and other volume size.

Microphone Input Volume: microphone volume size.

Features	Audio	Video	MCAST	Action URL	Time/Date
Audio Settings					
First Codec	G.722	Second Codec	G.711A		
Third Codec	G.711U	Fourth Codec	G.729AB		
Fifth Codec	None	Sixth Codec	None		
DTMF Payload Type	101 (96~127)	Default Ring Type	Type 1		
G.729AB Payload Length	20ms	Tone Standard	United St		
G.722 Timestamps	160/20m	G.723.1 Bit Rate	6.3kb/s		
Speakerphone Volume	5 (1~9)	MIC Input Volume	5 (1~9)		
Broadcast Output Volume	5 (1~9)	Signal Tone Volume	4 (0~9)		
Enable VAD	<input type="checkbox"/>				
Apply					

Step 4: Setting Function Key

Set the Function Key as shown below for a quick start. Click **[Apply]** to save this setting.

Type: Hot Key

Number 1: The Function Key will dial to this Number 1.

Number 2: if Number 1 is unavailable, it will be forwarded to Number 2.

Line: working line

Subtype: speed dial

System

Network

Line

Intercom settings

Security settings

Function Key

Function Key Settings

Input port Multiplexing as DSS Key2

Key	Type	Number 1	Number 2	Line	Subtype
DSS Key 1	Hot Key	5528		SIP1	Speed Dial
DSS Key 2	None			SIP1	Speed Dial

Advanced Settings

Use Function Key to Answer

Enable Speed Dial Hangup

Hot Key Dial Mode Select

Call Switched Time [S~50]S Day Start Time [00:00~23:59] Day End Time [00:00~23:59]

Step 5: Set the camera (if not connected can skip)

The original camera does not need to set up, connected to the device ⑨ black RJ45 network port and restart the device to wait 1 minute, the camera automatically connected successfully. To connect a non-original camera, insert the camera into another LAN or LAN port. Configure the following parameters and click **[Apply]**.

Connection mode: select external, click **[Apply]**, restart the device.

User name: external camera login required account.

Password: external camera login password required.

Camera type: select the camera manufacturers.

IP address: IP address of the camera, please use the camera matching scan tool to obtain the IP address.

Port: camera port number.

RTSP information: click **[Apply]**, the connection automatically shows the camera does not show the reverse.

Preview: copy and paste the main stream or sub-stream Url into the VLC player, or click **[Preview]** to display the current camera video.

The screenshot displays the SPA2 web interface with a red sidebar on the left containing navigation options: System, Network, Line, Intercom settings (selected), Security settings, and Function Key. The main content area has a top navigation bar with tabs: Features, Audio, Video, MCAST, Action URL, and Time/Date. The 'Video' tab is active, showing the 'Ip Camera Connect Settings' section. This section includes a 'Connect Mode' dropdown menu set to 'External' with an 'Apply' button below it. Below this is the 'Ip Camera Settings' section with the following fields: 'Position' (text input), 'User' (text input with 'admin' entered), 'Password' (text input), 'Ip Camera Brand' (dropdown menu set to 'X3I'), 'IP' (text input with '172.18.3.64' entered), and 'Port' (text input with '554' entered). An 'Apply' button is located at the bottom of this section. The 'RTSP Information' section at the bottom shows the 'Main Stream Url' and 'Sub Stream Url' both set to 'rtsp://172.18.3.64:554/user=admin&password=&channel=1&stream=0.sdp?real_stream' and 'rtsp://172.18.3.64:554/user=admin&password=&channel=1&stream=1.sdp?real_stream' respectively, with 'Preview' buttons next to each.